HOME
DECORATORS
C O L L E C T I O N

HDC# 16704 MFG# TW-19435AB / TW-19435AC
KENDALL 25" SINGLE VANITY 34.75"Hx25"W

ASSEMBLY INSTRUCTIONS

Note: 1. Before assembly, please be sure to work on a soft, flat surface to avoid any damage to the finish.
2. You need at least 2 people to finish the assembly of this product.

Made In China

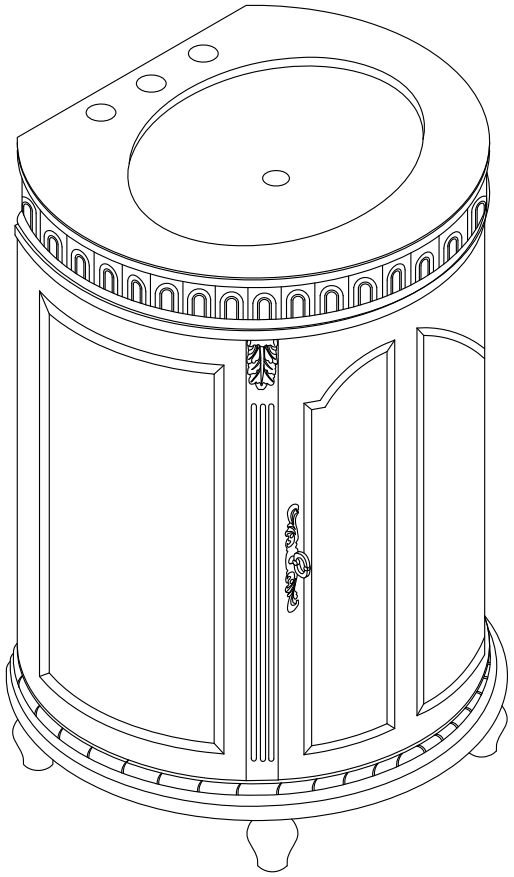

BEFORE ASSEMBLY

IMPORTANT NOTE: READ CAREFULLY BEFORE ASSEMBLY TO PREVENT DAMAGE TO PARTS. FOLLOWING INSTRUCTIONS LISTED BELOW IN THE PROPER SEQUENCE AS NUMBERED TO ASSURE FAST, EASY AND CORRECT ASSEMBLY.

ASSEMBLY TOOLS REQUIRED

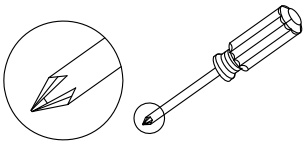

"+"Screw driver

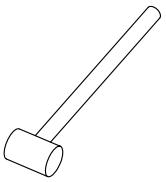

Rubber Mallet

WOODEN DOWEL INSTALLATION PROCEDURE

(1) FILL HOLE 1/4 FULL OF GLUE.
(2) GENTLY TAP DOWEL INTO HOLE
WITH RUBBER MALLET OR USE HAND
PRESS IN.
DO NOT USE HAMMER
(3) WIPE AWAY EXCESS GLUE.

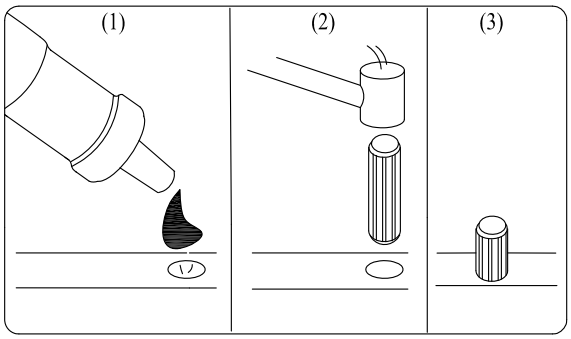

THANK YOU FOR PURCHASING THIS QUALITY PRODUCT. BE SURE TO CHECK ALL PACKING MATERIAL CAREFULLY FOR SMALL PARTS, WHICH MAY HAVE CAME LOOSE INSIDE THE CARTON DURING SHIPMENT. COUNT ALL PARTS AND MATERIAL HARDWARE, COMPARE WITH PARTS LIST TO BE SURE ALL PARTS ARE PRESENT. IF ANY PARTS ARE MISSING OR DAMAGED, PHONE, FAX OR MAIL TO OUR CUSTOMER SERVICE DEPARTMENT. FOR EFFICIENT AND SPEEDY SERVICE, PLEASE INDICATE THE MODEL NUMBER AND CODE LETTER OF THE PART NEEDED.

HARDWARE LIST

WOOD DOWEL 8 PCS  ϕ8X30mm (1)	ROUND HEAD BOLT FLAT WASHER SPRING WASHER 8 SETS  ϕ6X32mm (2)	MAGNET LOCK FLAT HEAD SCREW 1 SET  ϕ3X12mm (3)	KNOB BOLT 1 SET (4)	IRON SLICE FLAT HEAD SCREW 1 SET  ϕ3X12mm (5)
HINGE FLAT HEAD SCREW 2 SETS 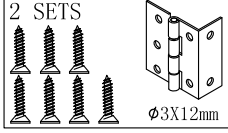 ϕ3X12mm (6)	SHELF HOLDER 4 PCS (7)	ROUND HEAD SCREW 8 PCS ϕ3X12mm (8)	ALLEN KEY 1 PC  (9)	GLUE 1 PC  (10)

PARTS LIST

BOX 1

BOTTOM PANEL 1 PC 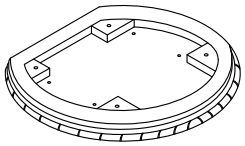 A	LEG 4 PCS  B	TOP FRAME 1 PC 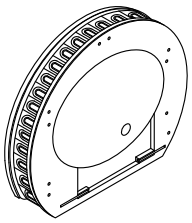 C
SHELF 1 PC 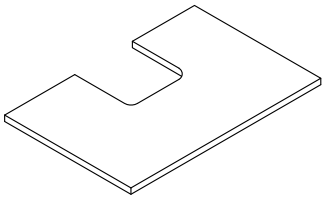 G	BACK PANEL 2 PCS H	

BOX 2

LEFT SIDE PANEL 1 PC 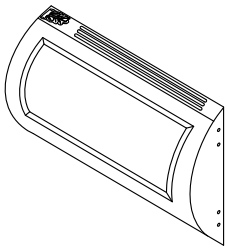 D	RIGHT SIDE PANEL 1 PC 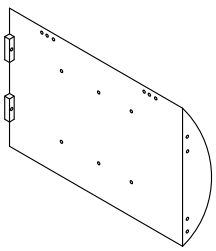 E	DOOR 1 PC  F

NOTE: THE SURFACE WITH THE STICKER IS THE BACK SIDE.

STEP 1: ASSEMBLE BOTTOM PANEL (A) AND LEG (B)

- ROTATE LEG (B) ONTO BOTTOM PANEL (A) TIGHTLY.

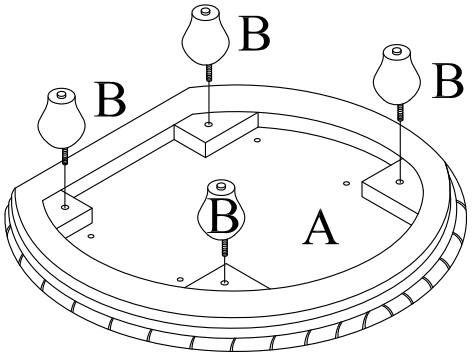

STEP 2: ASSEMBLE TOP PANEL (C) AND SIDE PANEL (D & E)

- FILL RELEVANT HOLES 1/4 FULL OF GLUE, INSERT WOOD DOWEL (1) INTO THESE HOLES. (DETAILS SEE WOODEN DOWEL INSTALLATION PROCEDURE ON PAGE 2).
- USE ROUND HEAD SCREW, SPRING WASHER AND FLAT WASHER (2) TO ASSEMBLE SIDE PANEL (D & E) AND TOP PANEL (C) TOGETHER BY ALLEN KEY (9).
- USE FLAT HEAD SCREW (3) TO ATTACH MAGNET LOCK (3) UNDER TOP FRAME (C).

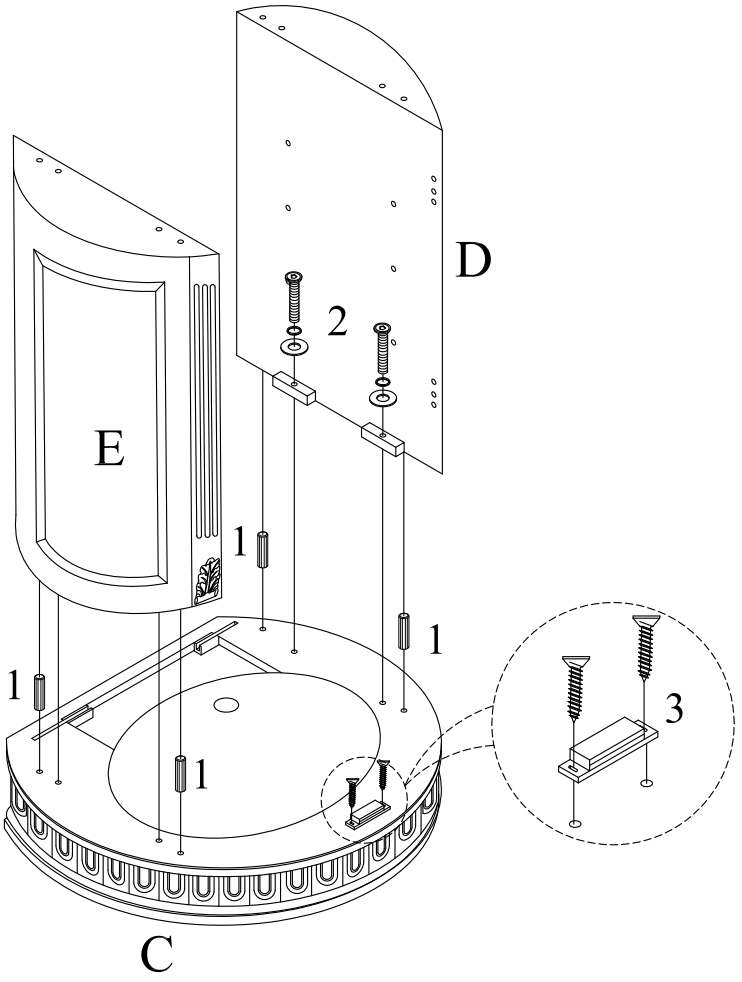

STEP 3: ASSEMBLE BOTTOM PANEL (A)

- FILL RELEVANT HOLES 1/4 FULL OF GLUE, INSERT WOOD DOWEL (1) INTO THESE HOLES. (DETAILS SEE WOODEN DOWEL INSTALLATION PROCEDURE ON PAGE 2).
- INSERT BACK PANEL (H) INTO THE SLOTS OF TOP PANEL (C) AND BOTTOM PANEL (A).
- USE ROUND HEAD BOLT, FLAT WASHER AND SPRING WASHER (2) TO ASSEMBLE BOTTOM PANEL (A) AND SIDE PANEL (D & E) TOGETHER.

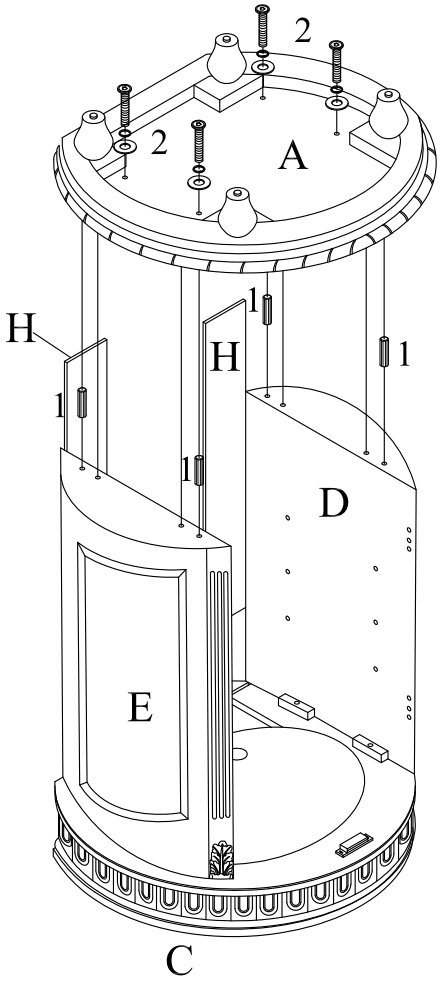

STEP 4: ASSEMBLE BACK PANEL (H)

- USE ROUND HEAD SCREW (8) TO ATTACH BACK PANEL (H) ON THE BACK OF PRE-ASSEMBLED UNIT.

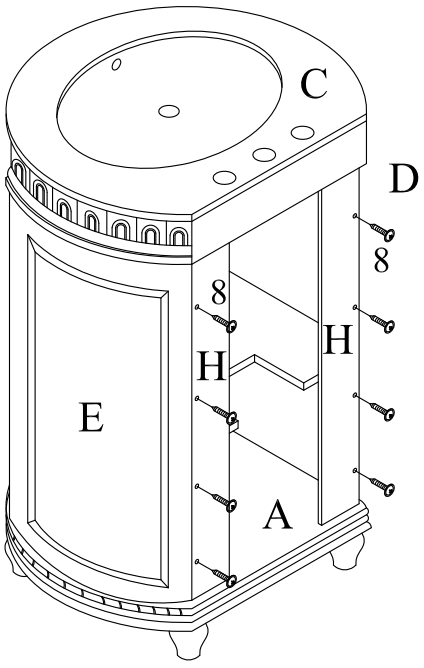

STEP 5: ASSEMBLE KNOB (4), IRON SLICE (5) AND HINGE (6)

- USE ROUND HEAD BOLT (4) TO ATTACH KNOB (4) ONTO DOOR (F).
- USE FLAT HEAD SCREW (5) TO ATTACH IRON SLICE (5) ONTO DOOR (F).
- USE FLAT HEAD SCREW (6) TO ATTACH HINGE (6) ONTO DOOR (F).
- USE FLAT HEAD SCREW (6) AND HINGE (6) TO ASSEMBLE DOOR (F) ONTO SIDE PANEL(E).

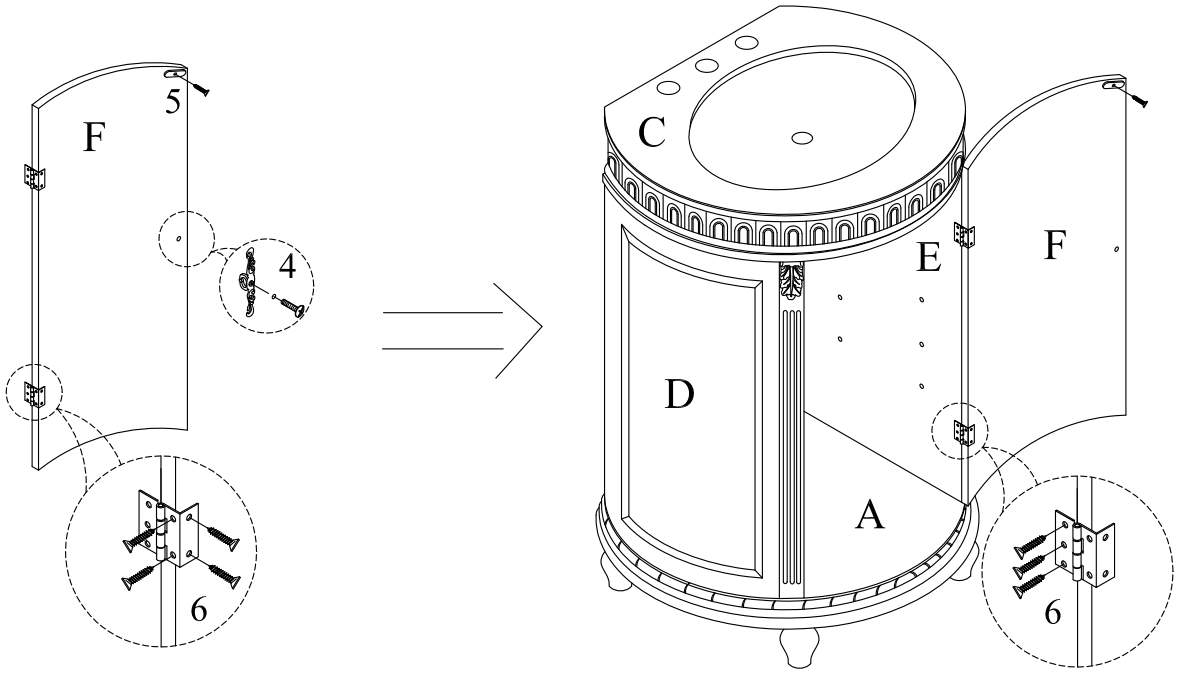

STEP 6: PLACE SHELF (G)

- INSERT SHELF HOLDERS (7) INTO THE HORIZONTAL HOLES INSIDE OF SIDE PANEL (D & E), THEN PUT SHELF (G) ON THEM AS SHOWN.